6. REMOTE CONTROL

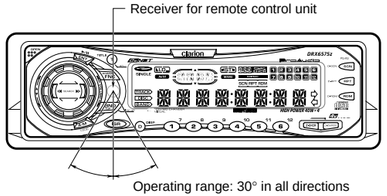

Remote control unit

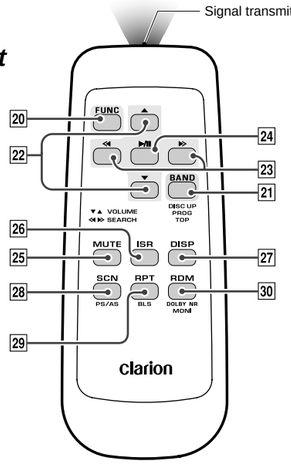

Inserting the Batteries

1. Turn the remote control unit over, then slide the rear cover in the direction of the arrow.
2. Insert the AA (UM-3/1.5V) batteries that came with the remote control unit facing in the directions shown in the figure, then close the rear cover.

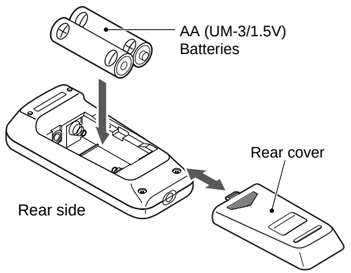

Notes:

Using batteries improperly can cause them to explode. Take note of the following points:

- *When replacing batteries, replace both batteries with new ones.*
- *Do not short-circuit, disassemble or heat batteries.*
- *Do not dispose of batteries into fire or water.*
- *Dispose of spent batteries properly.*

English

2. PRECAUTIONS

1. When the inside of the car is very cold and the player is used soon after switching on the heater moisture may form on the disc or the optical parts of the player and proper playback may not be possible. If moisture forms on the disc, wipe it off with a soft cloth. If moisture forms on the optical parts of the player, do not use the player for about one hour. The condensation will disappear naturally allowing normal operation.
2. Driving on extremely bumpy roads which cause severe vibration may cause the sound to skip.
3. When the auto antenna cord is connected to the car auto antenna cord, when the unit is switched to the radio mode (or the TV mode), the antenna is extended automatically. If the car is in a narrow space, the antenna may strike something, so be careful.
4. This unit uses a precision mechanism. Even in the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to consult the dealer or an experienced radio/TV technician for help.

⚠CAUTION

USE OF CONTROLS, ADJUSTMENTS, OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN, MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

THE COMPACT DISC PLAYER and MINI DISC PLAYER SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL.

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

INFORMATION FOR USERS:

CHANGES OR MODIFICATIONS TO THIS PRODUCT NOT APPROVED BY THE MANUFACTURER WILL VOID THE WARRANTY AND WILL VIOLATE FCC APPROVAL.

MODEL
clarion
12V ⊖ GROUND
AM 530-1710kHz/FM 87.9-107.9 MHz
THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.
THIS PRODUCTION COMPLIES WITH DHHS RULES 21 CFR SUB-CHAPTER J APPLICABLE AT DATE OF MANUFACTURE.
CLARION CO., LTD.
50 KAMITODA, TODA-SHI, SAITAMA-KEN, JAPAN.
MANUFACTURED:
SERIAL No.
PE
2862
Clarion Co.,Ltd.
MADE IN

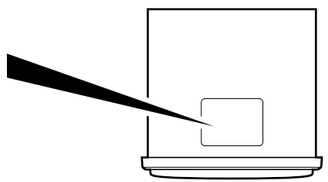

Bottom View of Source Unit

English

Handling Compact Discs

Use only compact discs bearing the COMPACT DISC DIGITAL AUDIO mark.

Do not play heart-shaped, octagonal, or other specially shaped compact discs.

Handling

- New discs may have some roughness around the edges. If such discs are used, the player may not work or the sound may skip. Use a ball-point pen or the like to remove any roughness from the edge of the disc.

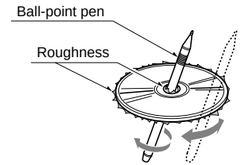

- Never stick labels on the surface of the compact disc or mark the surface with a pencil or pen.
- Never play a compact disc with any cellophane tape or other glue on it or with peeling off marks. If you try to play such a compact disc, you may not be able to get it back out of the CD player or it may damage the CD player.
- Do not use compact discs that have large scratches, are misshapen, cracked, etc. Use of such discs may cause misoperation or damage.
- To remove a compact disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.
- Do not use commercially available CD protection sheets or discs equipped with stabilizers, etc. These may damage the disc or cause breakdown of the internal mechanism.

Storage

- Do not expose compact discs to direct sunlight or any heat source.
- Do not expose compact discs to excess humidity or dust.
- Do not expose compact discs to direct heat from heaters.

Cleaning

- To remove fingermarks and dust, use a soft cloth and wipe in a straight line from the center of the compact disc to the circumference.
- Do not use any solvents, such as commercially available cleaners, anti-static spray or thinner to clean compact discs.
- After using special compact disc cleaner, let the compact disc dry off well before playing it.

Flip Down Panel

The DRX6575z uses a flip-down structure that makes possible large-size displays.

⚠CAUTION

When opening and closing the FLIP DOWN PANEL, be careful not to catch your fingers. They could be injured.

1. Always use the DRX6575z with the FLIP DOWN PANEL closed.
2. Do not force operations or use this device abnormally when opening or closing the FLIP DOWN PANEL.
3. Do not use the FLIP DOWN PANEL as a tray to place objects on when it is open.
4. When closing the FLIP DOWN PANEL, do not press OPEN button [1].
5. Strong impacts to the operating or display section can cause damage or deformation.
6. If the FLIP DOWN PANEL does not open fully, gently open it with your hand.

Be sure to unfold and read the next page.
Veuillez déplier et vous référer à la page suivante.
Cerciórese de desplegar y de leer la página siguiente.

English
Français
Español

3. CONTROLS / LES COMMANDES / CONTROLES

Source unit / Appareil pilote / Unidad fuente

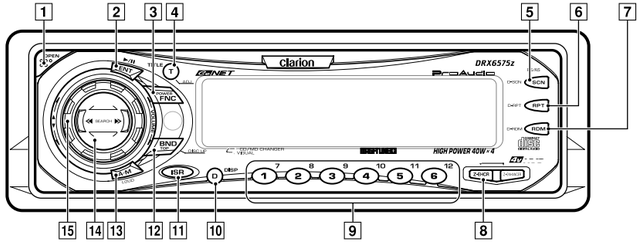

With the FLIP DOWN PANEL opened / Ouverture du PANNEAU RABATTABLE / Apertura del PANEL ABATIBLE

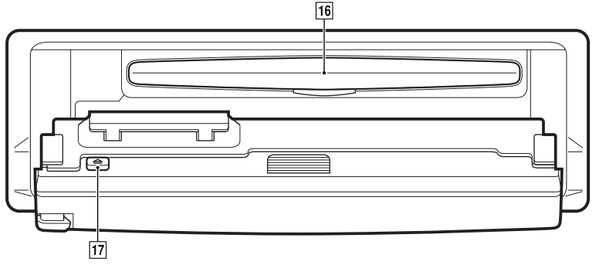

Display / Afficheur / Visualizador

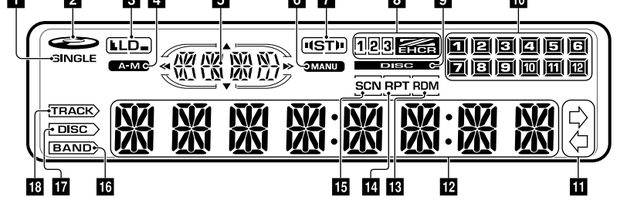

Note: *Be sure to unfold this page and refer to the front diagrams as you read each chapter.*
Remarque: *Veuillez déplier cette page et vous référer aux schémas quand vous lisez chaque chapitre.*
Nota: *Cuando lea los capítulos, despliegue esta página y consulte los diagramas.*

4. NOMENCLATURE

Note:
*• Be sure to read this chapter referring to the front diagrams of chapter "**3. CONTROLS**" on page 5 (unfold).*

Names of Buttons

1. OPEN button
2. ENT (enter) button
   Play/pause button
3. POWER button
   FNC (function) button
4. TITLE button
   ADJ (adjust) button
5. SCN (scan) button
   PS/AS (preset scan/auto store) button
6. RPT (repeat) button
7. RDM (random) button
8. Z-EHCR (z-enhancer) button
9. Preset buttons (1 to 6)
   Direct buttons (1 to 6) (7 to 12)
10. DISP (display) button
11. ISR (instant station recall) button
12. BND (band) button
    TOP button
13. A-M (audio mode) button
    LOUD (loudness) button
14. SEARCH button
15. Rotary knob
16. CD insertion slot
17. Eject button

Display Items

1. Single disc indication
2. Disc in indication
3. LD (loudness) indication
4. A-M (audio mode) indication
5. Function mode indication
   ∗ The names of modes being selected, etc. are displayed.
6. MANU (manual) indication
7. ST (stereo) indication
8. Z-EHCR (z-enhancer) indication
9. DISC indication
10. Preset channel indication (1 to 6)
    Disc number indication (1 to 12)
    ∗ The disc numbers corresponding to the discs in the CD or MD changer light.
11. Long title indication
12. Operation status indication
    ∗ The frequency, play time, clock, etc. are displayed.
13. RDM (random) indication
14. RPT (repeat) indication
15. SCN (scan) indication
16. BAND indication
17. DISC TITLE indication
18. TRACK indication

5. DCP

The control panel can be detached to prevent theft. When detaching the control panel, store it in the DCP (DETACHABLE CONTROL PANEL) case to prevent scratches.

We recommend taking the DCP with you when leaving the car.

Removing the DCP

1. Hold down POWER button 3 for 1 second or longer to turn off the power.

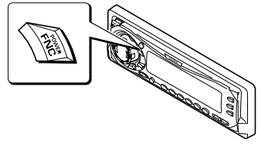

2. Deeply push in OPEN button 1 to unlock the FLIP DOWN PANEL.
   ∗ If the FLIP DOWN PANEL does not open fully, gently open it with your hand.

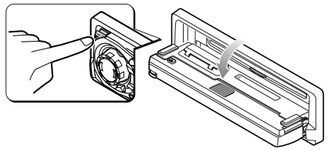

3. Pull the DCP toward you and remove it.

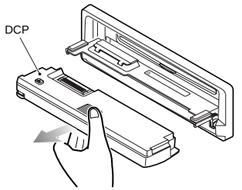

4. Close the HOLD FLAP.

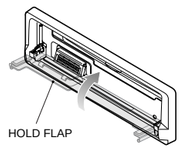

⚠CAUTION

Be sure to close the HOLD FLAP for safety when removing the DCP.

Attaching the DCP

1. Insert the right side of the DCP into the source unit.
2. Insert the left side of the DCP into the source unit.

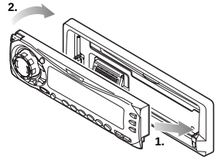

⚠CAUTION

- **The DCP can easily be damaged by shocks. After removing it, be careful not to drop it or subject it to strong shocks.**
- **If the FLIP DOWN PANEL is kept open, the DCP may drop due to vibration of the car.**
  This results in damage to the DCP. So close the FLIP DOWN PANEL or remove the DCP to store into the case.
- **The connector connecting the source unit and the DCP is an extremely important part. Be careful not to damage it by pressing on it with fingernails, screwdrivers, etc.**

Note:
• If the DCP is dirty, wipe off the dirt with a soft, dry cloth only.